


CYL-1 Cylinder Regulators Inlet Filter Installation Instructions

Make sure you thoroughly understand these directions before proceeding
MAKE SURE THE REGULATOR IS DISCONNECTED FROM AIR SOURCE
MAKE SURE ANY RESIDUAL PRESSURE IS BLED OFF FROM REGULATOR.

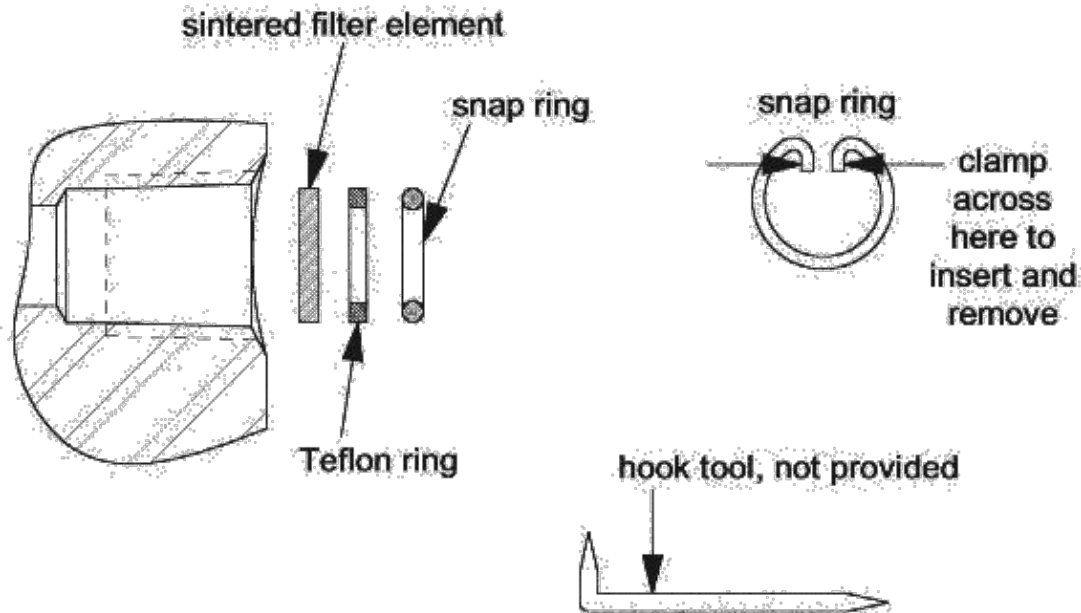

Instructions

1. Completely read these instructions before performing any of the operations.
2. Make sure the regulator is disconnected from pressure source; make sure any residual pressure is bled off from the regulator. **FAILURE TO DO THIS WILL RESULT IN SERIOUS PERSONAL INJURY. DO NOT PROCEED UNTIL PRESSURE HAS BEEN REMOVED AND/OR TERMINATED**
3. Clamp across ends of snap ring with needle nose pliers and pull snap ring straight out of port.
4. Remove PTFE ring with hook type tool.
5. Loosen sintered filter by turning counter-clockwise. A long, sharp tool works well for this.
6. Clean bottom of inlet port with isopropyl alcohol or similar cleaner, being careful not to allow foreign matter to enter regulator.
7. Install new sintered filter into bottom of inlet port.
8. Push new PTFE ring into port until it contacts filter.
9. Clamp across ends of new snap ring with needle nose pliers and insert into port as far as possible. Turn snap ring clockwise until it is in contact with PTFE ring.
10. The regulator is now ready for service.

GO Regulator

405 Centura Court • PO Box 4866 • Spartanburg, SC 29303
Phone (864) 574-7966 • Fax (864) 574-5608
www.goreg.com • sales-go@circor.com